

## IMPORTANT ALERT!

DISCONNECT canister before turning off air/gas flow  
ONLY use the calibrated adapter provided herein  
REMOVE relief valve only after it has fully vented

AIR  
-&-  
GAS

# Sampling INSTRUCTIONS

STEP  
1





For HazMat & HardHat (50-250 PSI)

# STEP 1

## FILL The Canister

**FOR YOUR SAFETY:** Some instructions have changed. Read completely prior to use. Do NOT tamper with nor alter kit. Use cautions when handling compressed air/gas apparatus.

VIDEO & INFO: [Lawrence-Factor/SampleCollection](http://Lawrence-Factor/SampleCollection)

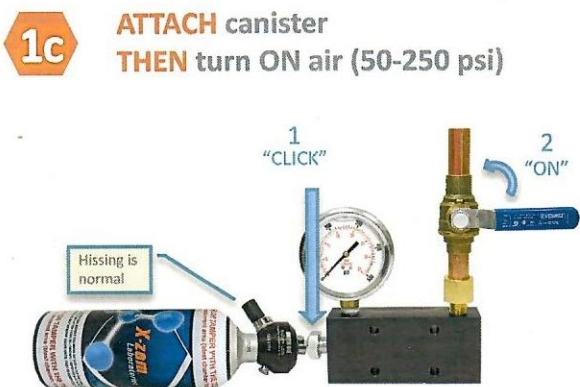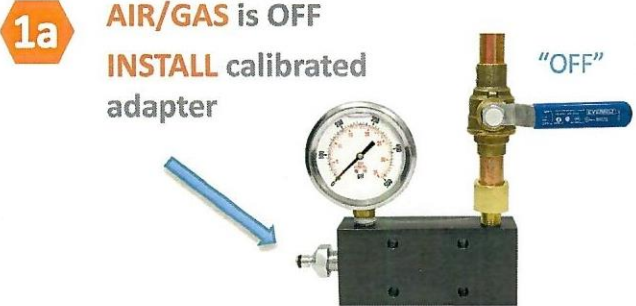

- 2** FILL FORM on next folder
- 3** RETURN all items to Xzam Labs

# X-zam Labs

Division of LAWRENCE FACTOR INC

*At Lawrence Factor® we are driven to ensure safe work & play activities of people who depend on compressed Air-&-Gas. Our products and services help to ensure that Astronauts go comfortably into space, Deep-Sea Divers can marvel at ocean reefs, First Responders return safely home, Green Gases are usable, and that Foods & Medicines will support healthy lives.*

**Others Make Air-&-Gas...  
We Ensure That It's PURE**

## **INCLUDED WITH KIT**

- ✓ Canister
- ✓ Special Adapter (1/4" NPT, rated 50-250 PSI)
- ✓ Return Address Label
- ✓ Strip of Box Tape
- ✓ Return Bubble-wrap Bag
- ✓ Sampling Instructions
- ✓ Sampling Form
- ✓ Information Form

**THIS KIT IS PROPERTY OF LAWRENCE  
FACTOR INC**

Read instructions thoroughly  
Never tamper with kit



Division of LAWRENCE FACTOR INC  
4790 NW 157<sup>th</sup> Street, Miami FL 33014 USA  
**ACCREDITED TO ISO-17025**